

ADJUSTABLE FLOOR LAMP ASSEMBLY INSTRUCTIONS

These instructions are provided for your safety.


Please read carefully before commencing work and retain for future reference.

SAFETY INFORMATION

- * The supply cable runs through the inside of this product. Take care not to place undue stress on the cable whilst unpacking to prevent the possibility of a poor connection.
- * If you are in any doubt consult a person competent to give advice on the assembly of electrical equipment.
- * Always be sure to use the correct type and wattage of bulbs as indicated on floor lamp. Do not exceed wattage stated.
- * If the external flexible cable of the lamp is damaged it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- * To prevent electrocution switch off at the mains supply before assembling or maintaining this fitting. Ensure the plug is not connected to any power supply and read instructions before assembly.
- * When changing the bulb, always unplug from the mains and allow the old bulb to cool down before handling. Dispose of used bulbs carefully.
- * Floor lamp should be used bulb is no closer than 30cm from any surface it is illuminating = ⓪.3m
- * **Head of this lamp will get hot when in use, ensure all adjustment handles are fully tightened before use.**

ASSEMBLY INSTRUCTIONS

1. Unpack the product and remove all packaging. Be careful not to scratch the surface of the product whilst removing the plastic wrapping.
2. Lay the product out on the floor. If the floor is not carpeted please cover it with a soft cloth to avoid damage to the flooring and surface of the product. Assembly should take place with the product lying flat.
3. It may be necessary to remove protective packaging (plastic / cardboard) located at cable entry points of the product.
4. Screw first pole onto top lamp head section, take care to hold the pole parallel to avoid cross threading. Hold lamp head section still and only turn the pole prevent twisting cable.
5. Screw lower pole onto top assembly. Hold top section still and only rotate lower pole to prevent twisting cable.
6. Gently pull excess cable out of base until lower pole fits through the base.
7. Fit flat washer, shake proof and nut onto stem screw thread protruding from base weight then use the spanner provided to fully tighten the nut. **Take care not to damage the cable.**
8. Stand the floor lamp upright and ensure all the assembled parts are fully tightened.
9. Fit the adjustment handle to the rear of the lamp head by screwing into place. Take care not to cross the threads. If in doubt undo and start again. Ensure the handle is secure. **Only use handle located behind head to control position when making adjustments.**
10. Adjustment position of the lamp head, hold lighting head then loosen one more of the wing screws. Only loosen enough to allow movement (DO NOT REMOVE) then retighten. Ensure all wing screws are fully tightened after adjustments.
11. Fit bulb: type and wattage as indicated on fitting. **The wattage indicated must not be exceeded.**
12. Floor lamp is now ready for use.

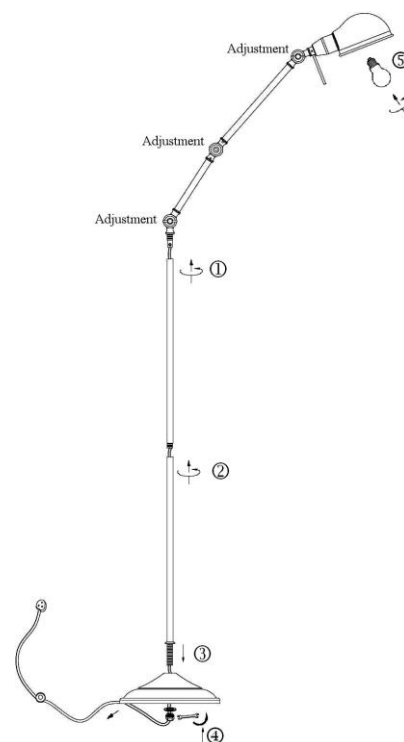

GENERAL INFORMATION

This product is designed for internal use only. **Do not use polish or abrasive cleaner – just a soft dry cloth.**

To register your product for an extended five-year warranty, please complete the simple form at

www.darlighting.co.uk/warranty

You'll need to fill in the details of the product, the retailer you purchased it from, and also the installer and the installation.

Please also upload a clear copy of the original purchase invoice or receipt to complete this registration.

UK: där Lighting Ltd, Wildmere Road, Banbury, Oxon, OX16 3JZ

Ireland & EU: Dar Lighting Ireland Limited, Suite 108, Q House, 76 Furze Road, Sandyford Industrial Estate, Dublin 18