


PRODUCT SPECIFICATION

Charge Voltage:	5 Volts DC Charge cable provided USB A to USB-C
Lamp Type:	LED (Light Emitting Diode)
Material:	Aluminum casting & glass
Battery Type:	Li-on Lithium ion (not replaceable)
Battery Capacity:	4000mAh (2 x 2000mAh)
Battery Charge Time:	Fast-Charge (10 watts) approx. 5 hours Standard charge (5 watts) approx. 10 hours
Usage Time:	Approx. 7 hours fully charged. – Full light setting. Approx. 22 hours fully charged – Lowest light setting.
IP Rating:	54 Suitable for outdoor use
LED Light Output:	281Lm - 3000K, 224Lm - 4000K, 290Lm - 6500K - 5W 3 colour temperature changing touch dimmable.

Parts Included: USB-C Charge cable
(Not part of product, any colour)




ATTENTION!


- * LED unit is supplied and fitted with Li-ion battery.
- * There are no serviceable parts inside this LED product.
- * If charge cable is damaged it must be replaced.
- * Improper opening of the device, tampering or changes to the product will invalidate the warranty.
- * Use only recommended power source and adaptor.
- * We recommend charging this LED product indoors.
- * Do not submerge this LED product into water.
- * When not in use ensure USB charging socket does not get filled debris entering socket.
- * Do not subject LED product to excessive heat particularly at the top where the battery is located.
- * If the battery drains quicker than previously after full charge is indicated, it is reaching end of its useful life span.
- *  This product contains LED circuit and Li-ion battery, dispose of these safely at their end of life.
■ Please obtain disposal advice from your local authority.

OPERATION

- Before use, charge the battery fully, carefully lift off the silicone plug located underside of product whilst taking care not to pull out of anchorage.
- Plug USB-C charge cable into the socket and the other side connected to a suitable charger. A red LED light will illuminate at the close to USB charge port.
- When charging process is complete the red LED light will change colour to green.
- Charge cable can then be safely removed from the table lamp. Charging time will be dependent on how much charge the battery requires.
- Restore silicone plug over USB-C port, ensure this is correctly fitted to prevent moisture / debris from contaminating charge port.



- Press touch switch located top of the unit and release to turn LED lamps ON. LED light will illuminate from the top and underside of the lighting head.
- Press touch switch and release repeatedly to cycle through these settings.  4th press of the touch switch will turn the LED light off.

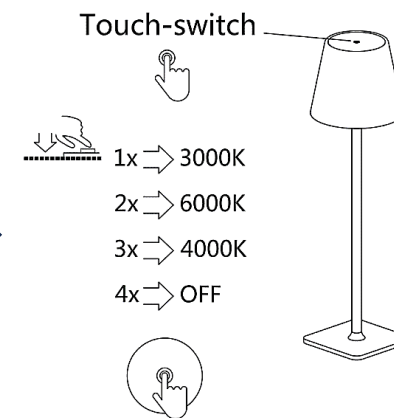

- To change the light level, keep the touch switch pressed and this will cause light level to increase / decrease in steps until released.
- To change the direction light level steps, press touch switch to increase / decrease in steps until released.
- Whilst the lamp is illuminated to switch LED light off, press touch switch then release.

BATTERY SAFETY PRECAUTIONS

- The battery must only be charged using a USB charger (standard or Fast-Charge)
- The product may only be charged with USB A to USB-C charger lead. (supplied)
Important: some proprietary charge cables may not be compatible for use with this product.
- Do not attempt to disassemble, alter or apply heat to the battery!
- In case of leakage, do not allow liquid to come into contact with skin. If liquid is spilt on clothes or skin immediately wash off with water.
- Should skin problems occur after handling this product, contact a doctor.
- Always unplug the LED unit from the charger when it is fully charged or when not in use.
- When the product is stored under 25 degrees Celsius it can be left for up to 5 months. If left for longer than this period, make sure to charge it fully again.

To maintain a longer battery life, we recommend you allow the battery to deplete at least once a month and then fully charge it before use.

TROUBLE SHOOTING

Should you experience any difficulties, check the fault types below:

FAULT	POSSIBLE CAUSE	SOLUTION
Unit does not work	<ul style="list-style-type: none">• LED unit might have been switched off.• Battery depleted.	<ul style="list-style-type: none">• Make sure switch located on the top of the light is depressed to switch it on.• Charge the battery using USB A to USB-C lead supplied and allow the LED light to turn to green.
Battery not taking charge	<ul style="list-style-type: none">• Battery depleted.• Connection issue	<ul style="list-style-type: none">• Connect charge cable and plug this into USB charger and make sure charge indicator is illuminated.• Unplug the charge adaptor and reconnect.
Battery gets depleted quickly.	<ul style="list-style-type: none">• Battery might not have been fully charged as assumed.	<ul style="list-style-type: none">• Ensure battery is fully charged and charge indicator shows green.• It may be the battery is coming to its end of life.

*UK: där Lighting Ltd, Wildmere Road, Banbury, Oxon, OX16 3JZ
Ireland & EU: Dar Lighting Ireland Limited, Suite 108, Q House, 76 Furze Road,
Sandyford Industrial Estate, Dublin 18*

där[®]
lighting group



**3 COLOUR TEMP TOUCH DIMMABLE LED
IP54 BATTERY OPERATED OUTDOOR LAMP
(USB-C RECHARGEABLE)**

INSTRUCTIONS