



PRODUCT SPECIFICATION

Charge Voltage:	5 Volts DC Charge cable provided USB A to USB-C
Lamp Type:	LED (Light Emitting Diode)
Material:	Metal / Fabric Shade
Battery Type:	Li-on Lithium ion (not replaceable)
Battery Capacity	2000mAh
Battery Charge Time:	Fast-Charge (10 watts) approx. 3 hours. Standard charge (5 watts) approx. 6 hours
Usage Time:	Approx. 6-7 hours from fully charged. (100 % brightness)
IP Rating:	N/A
LED Light Output:	239Lm, 3,000K, 2.4 watts.
Parts Included:	Fixing screws x 2pcs USB-C Charge cable. <i>(Not part of product, colour may vary)</i>




ATTENTION!

- * LED unit is supplied and fitted with Li-ion battery.
- * There are no serviceable parts inside this LED product.
- * If charge cable is damaged it must be replaced.
- * Improper opening of the device, tampering or changes to the product will invalidate the warranty.
- * Use only recommended power source and adaptor.
- * We recommend charging this LED product indoors.
- * Do not submerge this LED product into water.
- * When not in use ensure USB charging socket does not get filled debris entering socket.
- * Do not subject LED product to excessive heat particularly at the top where the battery is located.
- * If the battery drains quicker than previously after full charge is indicated, it is reaching end of its useful life span.
- *  This product contains LED circuit and Li-ion battery, dispose of these safely at their end of life.
 Please obtain disposal advice from your local authority.

ASSEMBLY & FITMENT


- 1) Identify the location suitable for this product, ideally **within 1 metre** from a USB charge port.
- 2) Measure fixing centre **62.5mm** apart and use a pencil to mark the wall.
- 3) Where required, drill the holes into a wall whilst taking care there are no hidden wires or pipes.
- 4) Where required use the rawl plugs provided and fit screws into the holes drilled, **DO NOT** screw fully and leave a gap of approx. **5mm** between wall and screw head.
- 5) Attach wall light onto fixing screws fixed to the wall, it is important wall light is loose and is not a tight fit to prevent scratching or damage to wall finish.
- 6) Remove shade ring, fit the shade and secure using shade ring, take care not to over tighten shade ring.

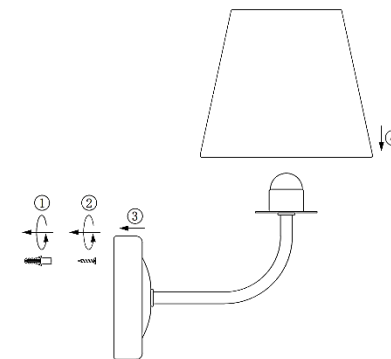

SHADE MANY NOT BE INCLUDED WITH THIS PRODUCT – CHECK PART CODE

OPERATION

 - a) Before use charge the battery fully.
- b) Plug USB-C charge cable into USB-C port using appropriate USB charger. Whilst charging a small window next to USC charge port will illuminate red. **(Charge port is located top of wall light)**
- c) When charging process is complete the small window next to chare port will change to green, charge cable can now be safely removed. Charging time will be dependent on how much charge battery requires until full.
- d) Press touch sensor button located at the front of this product then release. **(Touch sensor is located at the bottom of wall light)**



Stage 1 touch – **10%**

Stage 2 touch – **50%**

Stage 3 touch – **100%**

Press again to switch - **OFF**



BATTERY SAFETY PRECAUTIONS

- The battery must only be charged using a USB charger (standard or Fast-Charge)
- The product may only be charged with USB A to USB-C charger lead. (supplied)
Important: some proprietary charge cables may not be compatible for use with this product.
- Do not attempt to disassemble, alter or apply heat to the battery!
- In case of leakage, do not allow liquid to come into contact with skin. If liquid is spilt on clothes or skin immediately wash off with water.
- Should skin problems occur after handling this product, contact a doctor.
- Always unplug the LED unit from the charger when it is fully charged or when not in use.
- When the product is stored under 25 degrees Celsius it can be left for up to 5 months. If left for longer than this period, make sure to charge it fully again.

To maintain a longer battery life, we recommend you allow the battery to deplete at least once a month and then fully charge it before use.

TROUBLE SHOOTING

Should you experience any difficulties, check the fault types below:

FAULT	POSSIBLE CAUSE	SOLUTION
Unit does not work	<ul style="list-style-type: none">• LED unit might have been switched off.• Battery depleted.	<ul style="list-style-type: none">• Make sure switch located on the top of the light is depressed to switch it on.• Charge the battery using USB A to USB-C lead supplied and allow the LED light to turn to green.
Battery not taking charge	<ul style="list-style-type: none">• Battery depleted.• Connection issue	<ul style="list-style-type: none">• Connect charge cable and plug this into USB charger and make sure charge indicator is illuminated.• Unplug the charge adaptor and reconnect.
Battery gets depleted quickly.	<ul style="list-style-type: none">• Battery might not have been fully charged as assumed.	<ul style="list-style-type: none">• Ensure battery is fully charged and charge indicator shows green.• It may be the battery is coming to its end of life.

UK: där Lighting Ltd, Wildmere Road, Banbury, Oxon, OX16 3JZ
Ireland & EU: Dar Lighting Ireland Limited, Suite 108, Q House, 76 Furze Road, Sandyford Industrial Estate, Dublin 18

där[®]
lighting group



(SHADE SOLD SEPARATELY)
**3 STAGE TOUCH LED BATTERY OPERATED
DETACHABLE WALL LIGHT
USB-C RECHARGEABLE**

INSTRUCTIONS