

PRODUCT SPECIFICATION

Charge Voltage:	5 Volts DC Charge cable provided USB A to USB-C
Lamp Type:	LED (replaceable by a professional)
Material:	Metal, glass and fabric shade
Battery Type:	Li-on Lithium ion 4000mAh (2000mAh x 2 pcs) (replaceable by a professional)
Batt. Life Expectancy:	Approx. 3 years - dependent on conditions
Batt. Charge Time:	Fast-Charge (10 watts) approx. 3 hours. Standard charge (5 watts) approx. 6 hours
Usage Time:	Approx. 6 - 7 hours from fully charged (100 % brightness)
IP Rating:	N/A
LED Light Output:	217Lm, 3,000K
Parts Included:	USB-A to USB-C Charge cable. (Some proprietary cables may not work with this product)




ATTENTION!

- * LED unit is supplied and fitted with Li-ion battery.
- * LED circuit board and battery units are replaceable by a professional.
- * If the charge cable is damaged, it must be replaced.
- * Improper opening of the device, tampering or changes to the product will invalidate the warranty.
- * Use only the recommended USB power source and adaptor.
- * We recommend charging this LED product indoors.
- * Do not submerge this LED product in water.
- * When not in use, ensure the USB charging socket does not get filled with debris or get wet, and use the cover where provided.
- * Do not subject LED product to excessive heat, particularly at the top where the battery is situated.
- * If the battery drains quicker than previously after a full charge, this would indicate it might be reaching the end of its useful lifespan.
- * This product contains a light source(s) of energy efficiency class. 
- *  This product contains LED circuit and Li-ion battery, dispose of these safely at their end of life.
 Please obtain disposal advice from your local authority.


TABLE LAMP ASSEMBLY

 - 1) Unpack the table lamp from its packaging.
- 2) Remove the shade ring from the lampholder; then fit the shade. ①
- 3) Secure the shade using the shade ring provided. ②

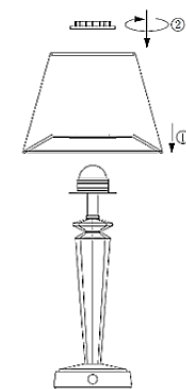

OPERATION

 - a) Before using, charge the battery fully.
- b) Plug the USB-C charge cable into the USB-C port, whilst the charging small window next to the port will illuminate red.
- c) When the charging process is complete small window next to the port will illuminate green, charge cable can now be safely removed. Charging time will be dependent on how much charge is in the battery.
- d) Touch the button located at the front of this product, then release.

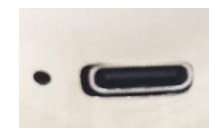


Stage 1 touch – 10%

Stage 2 touch – 50%

Stage 3 touch – 100%

 Touch again to switch - OFF

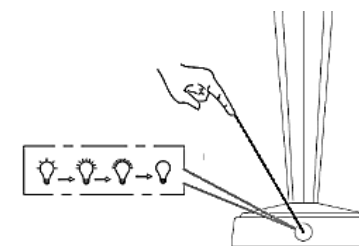

BATTERY SAFETY PRECAUTIONS

- The battery must only be charged using a USB charger (standard or Fast-Charge)
- The product may only be charged with USB-A to USB-C charger lead. (supplied)
Important: Some proprietary charge cables may not be compatible for use with this product.
- Do not attempt to disassemble, alter or apply heat to the battery!
- In case of leakage, do not allow liquid to come into contact with skin. If liquid is spilt on clothes or skin, immediately wash off with water.
- Should skin problems occur after handling this product, contact a doctor.
- Always unplug the LED unit from the charger when it is fully charged or when not in use.
- When the product is stored under 25 degrees Celsius, it can be left for up to 5 months. If left for longer than this period, charge it fully again.

To maintain a longer battery life, we recommend you allow the battery to deplete at least once a month and then fully charge it before use.

TROUBLE SHOOTING

Should you experience any difficulties, check the fault types below:

FAULT	POSSIBLE CAUSE	SOLUTION
Unit does not work	• LED unit might have been switched off. • Battery depleted.	• Make sure the switch located on the top of the light is depressed to switch it on. • Charge the battery using the USB-A to USB-C lead supplied and allow the LED light to turn green.
Battery not taking charge	• Battery depleted. • Connection issue	• Connect the charge cable and plug this into USB charger and make sure the charge indicator is illuminated. • Unplug the charge adaptor and reconnect.
Battery gets depleted quickly.	• Battery might not have been fully charged as assumed.	• Ensure the battery is fully charged and the charge indicator shows green. • It may be that the battery is coming to its end of its life.

© English Heritage

The English Heritage Trust is a charity, no. 1140351, and company, no. 07447221, registered in England.

 
Manufactured under licence by

UK: där Lighting Ltd, Wildmere Road, Banbury, Oxon, OX16 3JZ

IRELAND & EU: där Lighting Ireland Limited, Suite 108, Q House, 76 Furze Road, Sandyford Industrial Estate, Dublin.



ELTHAM

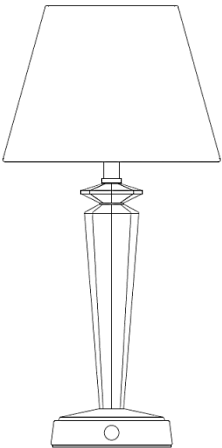

3 STAGE TOUCH LED TABLE LAMP USB-C RECHARGEABLE

INSTRUCTIONS